

### **Directions for Windows 7**

1. Close all programs in Windows.
2. Click on the Windows key in the bottom left hand corner of the screen.
3. Click on the Control Panel.
4. Click on the header Hardware and Sound.
5. Click on Manage audio devices under the “Sound” header
6. A window pops up with the first tab highlighted “playback.” Make sure your computers soundcard is selected. Ex. Realtek, SoundBlaster, ect. (If using the U2 headphone/mic, select “C-Media USB Driver.”)
7. Select the “Recording” tab at the top of the window.
8. Select the “C-media USB Device.”
9. Click apply, then click “OK.”
10. Close all windows.
11. Re-open your recording software and begin recording.

### **Directions for distorted sound.**

1. Follow directions 1-6 from above.
2. Highlight the “C-Media Driver” under the recording tab.
3. Select Properties.
4. A window pops up, click on the “Custom” tab.
5. Uncheck the “AGC” or automatic gain control box.
6. Click OK/Apply.
7. Close all windows.