

### **Directions for Windows XP**

1. Close all programs in Windows.
2. Click on the Start Menu.
3. Click on the Control Panel.
4. Click on the Sounds and Audio Devices icon.
5. A window will pop up and select the “Audio” tab at the top of this window.
6. Under the “Sound Playback” section make sure your computers soundcard is selected under the default device, ex. Realtek, SoundBlaster, ect. (If using the U2 headphone/mic, select “C-Media USB Driver.”)
7. Under the “Sound Recording” section make sure the selected default device in the “C-Media Driver”
8. Click apply, then OK.
9. Close all windows.
10. Re-open your recording software and begin recording.